

CC-Neck User Manual



Insert three Micro AAA 1.5 volt batteries and turn on the CC-Neck guitar with the small black switch. CAUTION: Do not use rechargeable batteries, as voltage peaks can damage the electronics.



To get the app, download the installation file from www.ccneck.rocks or scan the QR code on the left. You will download an "apk" file that only works on android devices.

Install blocked

For security reasons, your device is currently set to block installation of applications not obtained from Play Store. To change this, go to Settings > Security > Unknown sources.

CANCEL SETTINGS

Open the downloaded file. To allow app installs outside the Google Play Store navigate to Setting > Security. Check the option "Unknown sources". Tap OK on the prompt message. Select "Trust".




Now open the app and press the Bluetooth button. Allow the app to get the device's location and activate Bluetooth.


Then press the new appearing button "Press for available devices".



Select "Ble-Uno" from the list of available devices that now appears. You are now successfully connected to the CC-Neck guitar, even if the connection should no longer be displayed.

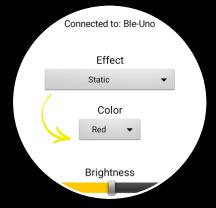

Now you have the possibility to select different effects and adjust their colors. The CC-Neck guitar shows all changes in real time. Please be careful with LIGHT SENSITIVE EPILEPSY.

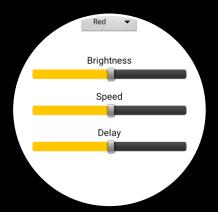

You can also set the brightness, speed and delay of each effect. If the CC-Neck guitar leaks (especially with white effects) the batteries should be replaced or the brightness reduced.



The CC-Neck guitar can save one standard effect that starts automatically when it is switched on. To do this, simply press the "Save" symbol as soon as you like a setting. AND NOW HAVE FUN!



Disclaimer: Despite the greatest possible care when programming the app, I do not accept any liability for possible damage to software and hardware that could result from installing and using the app. The use of the app is at your own risk.